
# ASSEMBLING INSTRUCTION FOR DOUBLE DOORS

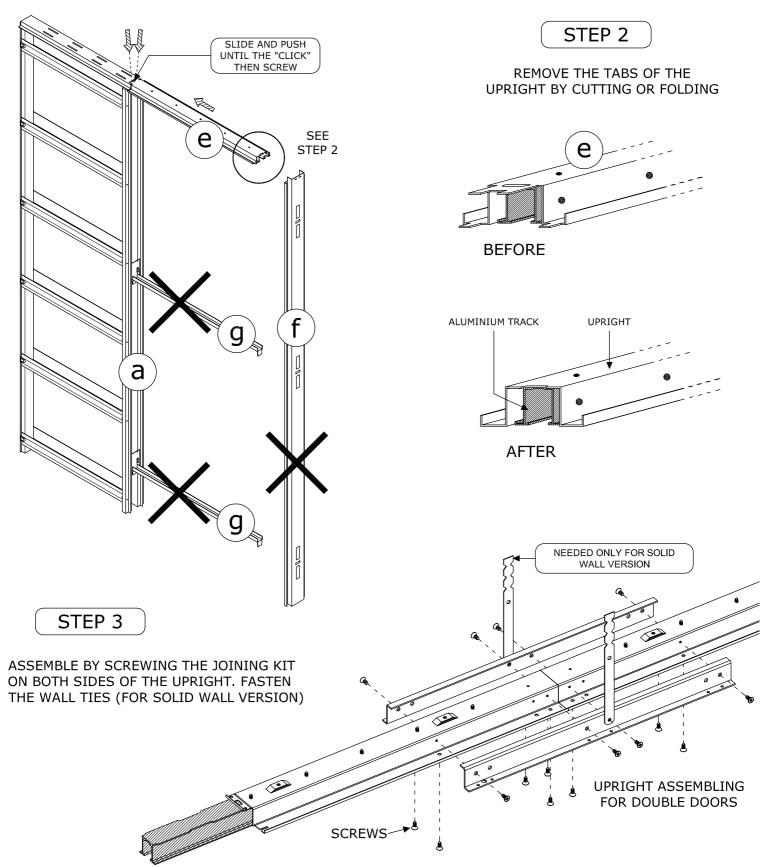


STEP 1


THE METAL DOOR POST (F) AND THE TWO SPACERS (G) SUPPLIED ARE USELESS (SEE SPECIFIC SPACER FOR DOUBLE VERSION - STEP 4)



STEP 4

### ASSEMBLE THE SPACER BY INSERTING (B) IN (A)

 


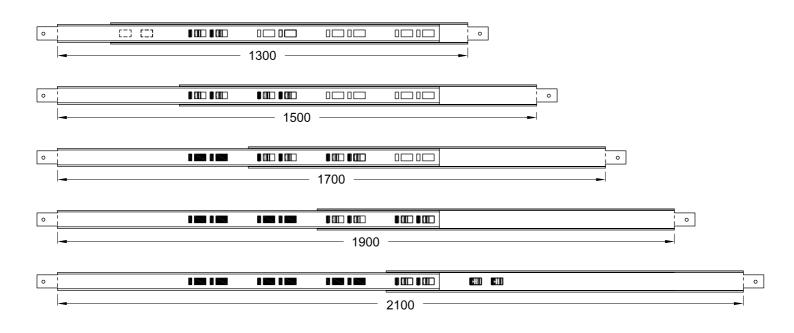

### STEP 5


#### DOUBLE DOORS COUNTERFRAME

PASSAGE SIZE	SPACER'S LENGHT	DOOR PANEL DIMENSIONS
600 + 600 =	L.1300	630 + 630
700 + 700 =	L.1500	730 + 730
800 + 800 =	L.1700	830 + 830
900 + 900 =	L.1900	930 + 930
1000 + 1000 =	L.2100	1030 + 1030

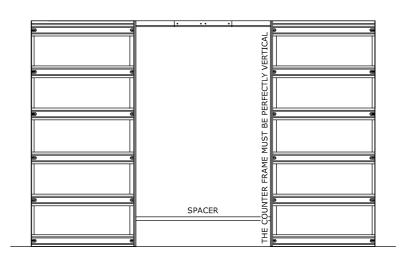

## POSITION OF RUNNERS FOR DOUBLE DOORS: PLACE THE DOOR BRACKETS AS

SHOWN ON PICTURE AT 140 mm FROM THE FRONT EDGE OF THE DOOR AND 120 mm FROM THE REAR EDGE

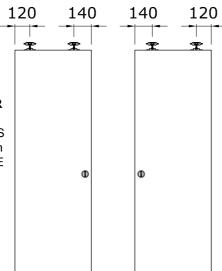

**N.B.:** PLACE THE DOOR-GUIDE ON THE FLOOR AT 10 mm FROM THE FRONT JAMBS BY USING THE DOUBLE VERTICAL ELEMENT OF THE DOOR-GUIDE

